



19. Fuel Pump Relay

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box. <Ref. to EI-39, REMOVAL, Glove Box.>
- 3) Remove the harness cover (A).

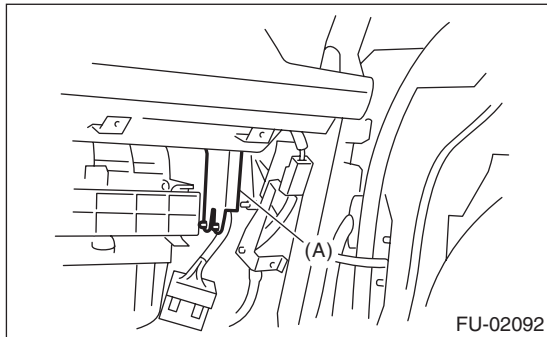

- 4) Remove the fuel pump relay.

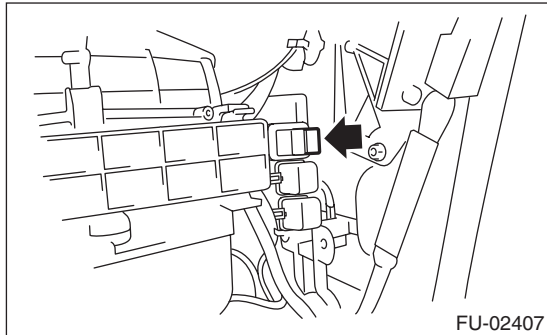

B: INSTALLATION

Install in the reverse order of removal.